


Installation Instructions for Template-Sheet

1. Unroll the template-sheet.

Turn the sheet over, re-roll and then lay flat.

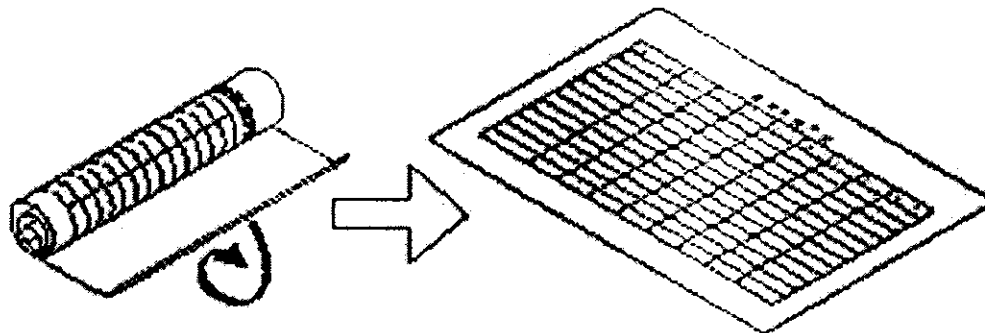

2. Clean the sheet surface of the copyboard.


Wipe with a slightly damp cloth.

Use a solution of water-thinned neutral detergent for difficult to remove markings. **DO NOT USE ALCOHOL BASED SOLUTIONS.**

The copyboard surface must be completely dry before proceeding.

3. Apply adhesive tape to the top of the template-sheet.


One piece at upper left, upper center and upper right portion of the template-sheet.

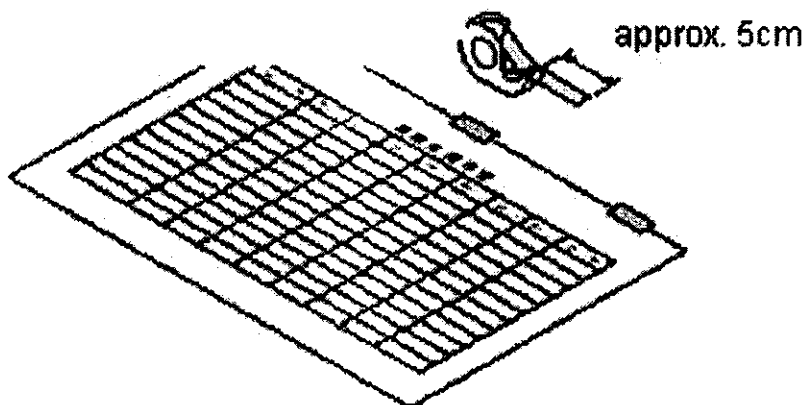


4. Lightly attach the template-sheet.

The template-sheet should be positioned in Effective Reading Area. (1-2" from each side of the copyboard)

Attach the center of the sheet first to the copyboard, then the right and left side.

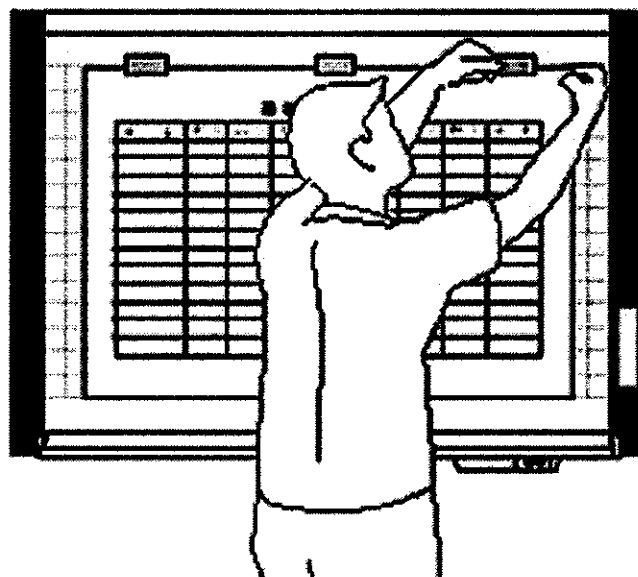


5. Lightly attach the lower portion of the template-sheet.

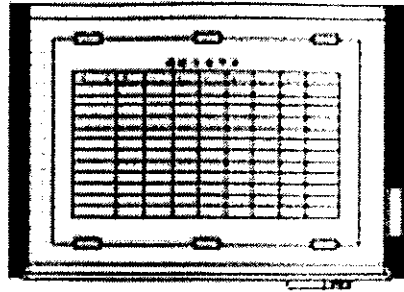


6. Attach the left side of the template-sheet.

Apply the tape to the entire left side of the template-sheet.

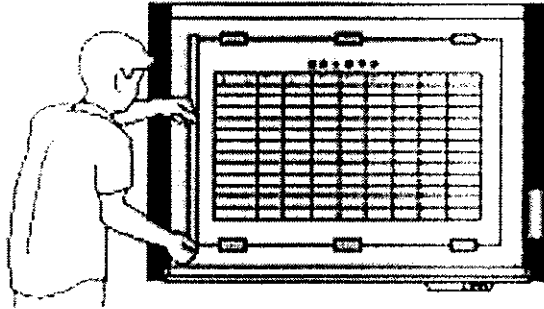


7. Attach the right side of the template-sheet.

Apply the tape to the entire right side of the template-sheet.

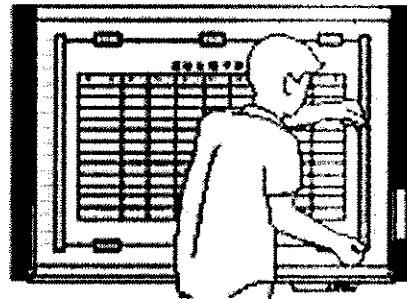

8. The top and bottom side of the template-sheet can now be firmly attached.

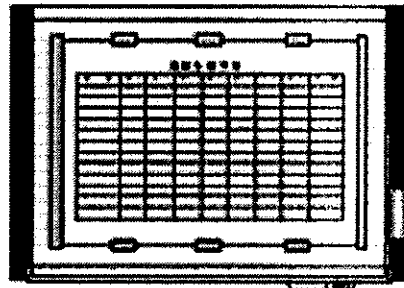

9. Scroll two (2) pages of the copyboard to make sure the template-sheet is secure by pushing the FEED/STOP button.

10. Make a test print by pushing the COPY button.

CAUTION: Only one template-sheet can be used per copyboard panel.